

Group: Protections

Subgroup: Overload Protection

Overload Protection

Setpoint group	Protections	Related FW	1.8.0
Range [units]	Enabled/Disabled/By LBI [-]		
Default value	Enabled	Alternative config	NO
Step	[-]		
Comm object	15664	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
This setpoint adjusts the behavior of generator Overload protection.			
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoints Overload BOC (page 227) , Overload Wrn (page 227) and Overload Delay (page 227) .		
Disabled:	Protection is disabled.		
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 532) .		

[back to List of setpoints](#)

Subgroup: Current Protection

Short Circuit Protection

Setpoint group	Protections	Related FW	1.8.0
Range [units]	Enabled / Disabled / By LBI [-]		
Default value	Enabled	Alternative config	NO
Step	[-]		
Comm object	15665	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
This setpoint adjusts the behavior of generator Short Circuit protection.			
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoints Short Circuit BOC (page 228) and Short Circuit BOC Delay (page 228) .		
Disabled:	Protection is disabled.		
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 532) .		

[back to List of setpoints](#)

IDMT Overcurrent Protection

Setpoint group	Protections	Related FW	1.8.0						
Range [units]	Enabled / Disabled / By LBI[-]								
Default value	Enabled	Alternative config	NO						
Step	[-]								
Comm object	15666	Related applications	AMF, MRS						
Config level	Advanced								
Setpoint visibility	Always								
Description									
This setpoint adjusts the behavior of generator IDMT Overcurrent protection.									
<table><tr><td>Enabled:</td><td>Protection is enabled. Behavior of protection is adjusted via setpoint IDMT Overcurrent Delay (page 229).</td></tr><tr><td>Disabled:</td><td>Protection is disabled.</td></tr><tr><td>By LBI:</td><td>Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 532).</td></tr></table>				Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoint IDMT Overcurrent Delay (page 229) .	Disabled:	Protection is disabled.	By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 532) .
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoint IDMT Overcurrent Delay (page 229) .								
Disabled:	Protection is disabled.								
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 532) .								

[◀ back to List of setpoints](#)

Current Unbalance Protection

Setpoint group	Protections	Related FW	1.8.0
Range [units]	Enabled / Disabled / By LBI[-]		
Default value	Enabled	Alternative config	NO
Step	[-]		
Comm object	15667	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
This setpoint adjusts the behavior of generator Current Unbalance protection.			
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoints Current Unbalance BOC (page 230) and Current Unbalance BOC Delay (page 230) .		
Disabled:	Protection is disabled.		
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 532) .		

[◀ back to List of setpoints](#)

Subgroup: Voltage Protection

Generator <> Voltage Protection

Setpoint group	Protections	Related FW	1.8.0
Range [units]	Enabled / Disabled / By LBI [-]		
Default value	Enabled	Alternative config	NO
Step	[-]		
Comm object	15668	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
This setpoint adjusts the behavior of generator Generator <> Voltage protection. GCB closing is blocked, if the protection is disabled!			
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoints Generator Overvoltage Sd (page 230) , Generator Overvoltage Wrn (page 231) , Generator Undervoltage BOC (page 231) , Generator Undervoltage Wrn (page 232) and Generator <> Voltage Delay (page 232) .		
Disabled:	Protection is disabled.		
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 532) .		

 [back to List of setpoints](#)

Voltage Unbalance Protection

Setpoint group	Protections	Related FW	1.8.0
Range [units]	Enabled / Disabled / By LBI [-]		
Default value	Enabled	Alternative config	NO
Step	[-]		
Comm object	15669	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
This setpoint adjusts the behavior of generator Voltage Unbalance protection.			
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoints Voltage Unbalance BOC (page 232) and Voltage Unbalance BOC Delay (page 233) .		
Disabled:	Protection is disabled.		
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 532) .		

 [back to List of setpoints](#)

Subgroup: Frequency Protection

Generator Frequency Protection

Setpoint group	Protections	Related FW	1.8.0
Range [units]	Enabled / Disabled / By LBI [-]		
Default value	Enabled	Alternative config	NO
Step	[-]		
Comm object	15670	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
This setpoint adjusts the behavior of generator Generator Frequency protection. GCB closing is blocked, if the protection is disabled!.			
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoints Generator Overfrequency BOC (page 233) , Generator Overfrequency Wrn (page 233) , Generator Underfrequency BOC (page 234) , Generator Underfrequency Wrn (page 234) , and Generator <> Frequency Delay (page 234) .		
Disabled:	Protection is disabled.		
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 532) .		

[back to List of setpoints](#)

Subgroup: Speed Protection

Underspeed Protection

Setpoint group	Protections	Related FW	1.8.0
Range [units]	Enabled / Disabled / By LBI [-]		
Default value	Enabled	Alternative config	NO
Step	[-]		
Comm object	15671	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
This setpoint adjusts the behavior of generator Underspeed protection.			
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoint Underspeed Sd (page 207) .		
Disabled:	Protection is disabled.		
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 532) .		

[back to List of setpoints](#)

Overspeed Protection

Setpoint group	Protections	Related FW	1.8.0
Range [units]	Enabled / Disabled / By LBI [-]		
Default value	Enabled	Alternative config	NO
Step	[-]		
Comm object	15672	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
This setpoint adjusts the behavior of generator Overspeed protection.			
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoint Overspeed Sd (page 207) .		
Disabled:	Protection is disabled.		
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 532) .		

[back to List of setpoints](#)

Group: Dual Operation

Subgroup: Dual Operation

Running Hours Max Difference

Setpoint group	Dual Operation	Related FW	1.8.0
Range [units]	0,1 .. 1000,0 [h]		
Default value	10 h	Alternative config	NO
Step	0,1 h		
Comm object	16039	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint COM1 Mode (page 343) and COM2 Mode (page 344)		
Description			
This setpoint adjusts the maximal allowed difference of dual operation running hours between Master and Slave. When difference is higher, swap of load between controllers should be done.			

[back to List of setpoints](#)